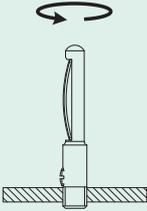


Ø 4 mm Standarereinbaustecker	Ø 4 mm standard built-in plugs				
<table border="1" data-bbox="311 501 1315 580"> <thead> <tr> <th data-bbox="311 501 815 539">Artikel-Nr. / article number</th> <th data-bbox="815 501 1315 539">Beschreibung / description</th> </tr> </thead> <tbody> <tr> <td data-bbox="311 539 815 580">930581000</td> <td data-bbox="815 539 1315 580">VST 100</td> </tr> </tbody> </table>		Artikel-Nr. / article number	Beschreibung / description	930581000	VST 100
Artikel-Nr. / article number	Beschreibung / description				
930581000	VST 100				
<p><b>Für Prüf- und Messstromkreise,</b> die nicht direkt mit dem Netz verbunden sind.</p> <p><b>For test and measuring circuits,</b> that are not connected directly to the mains.</p>					
<p><b>Sicherheitshinweise</b></p> <p>Die Produkte erfüllen die angegebenen technischen Daten nur, wenn die hier beschriebenen Schritte eingehalten und fachmännisch ausgeführt werden. Die Montage und Installation ist nur durch entsprechend qualifiziertes Personal durchzuführen, dabei sind alle anwendbaren gesetzlichen Sicherheitsbestimmungen und Regelungen einzuhalten. Für Schäden infolge einer Nichtbeachtung der Sicherheitshinweise übernimmt SKS keinerlei Haftung.</p> <p>Zum Schutz vor einem elektrischen Schlag müssen bei Montage bzw. Demontage der Produkte immer alle Bauteile spannungsfrei sein.</p> <p>Die Steckverbindung darf nicht unter Last getrennt werden.</p> <p>Bei einer Kombination von Messzubehör aus verschiedenen Messkategorien bestimmt die niedrigste Kategorie die Messkategorie des gesamten Aufbaus.</p> <p><b>i Die technischen Daten entnehmen Sie dem Produktdatenblatt.</b></p>	<p><b>Safety instructions</b></p> <p>The products fulfil the specified technical data only if below described steps will be observed and processed professionally. The assembly and installation should be done only by appropriate qualified specialists subject to all applicable safety regulations and rules. SKS does not accept any liability for damages due to disregard of safety regulations.</p> <p>For protection against electric shock, all components have to be completely disconnected from the power supply during assembly or disassembly.</p> <p>The connection must not be disconnected under load.</p> <p>For a combination of test accessories from different measuring categories, the lowest category determines the measurement category for complete installation.</p> <p><b>i Please see all technical data on product data sheet.</b></p>				

<b>Notwendige Werkzeuge</b>		<b>Necessary tools</b>
Bohrer - Ø 4,2 mm		drill Ø 4.2 mm
Gewindeschneider M5		thread tap M5

<b>Montage</b>		<b>Assembly</b>
<ul style="list-style-type: none"> <li>Einbauöffnung bohren und Gewinde schneiden</li> </ul>		<ul style="list-style-type: none"> <li>Drill an installation hole and cutting a thread</li> </ul>
<ul style="list-style-type: none"> <li>Stecker in Einbauöffnung schrauben</li> <li>Anzugsdrehmoment: max. 0,4Nm</li> </ul>		<ul style="list-style-type: none"> <li>screw the plug into the installation hole</li> </ul>